



ST 5511 NATURE ACTIVITY CIRCUITTM DELUXE PACKAGE APPLICATION INSTRUCTIONS

STENCILS INCLUDED IN YOUR PACKAGE: 10 Stencils

ST 5100 March Ants | ST 5101 Crab Crawl

ST 5102 Tiptoe Snake | ST 5103 Jump Logs®

ST 5104 Step Stones | ST 5105 Balance Tightrope

ST 5092 Skipadee the Dragonfly Hopscotch ${\mathbb R}$

ST 5106 Tree Pose | ST 5113 Moon Pose

ST 5111 Cobra Pose






ST 5106 TREE POSE APPLICATION INSTRUCTIONS

SIZE

approx. 3 feet 2 inches wide x 6 feet 4 inches long

PAINTERS & TIME 1-2 painters for less than 1 hr

INCLUDED IN THE BOX: 1 Stencil Sheet (3 pieces)

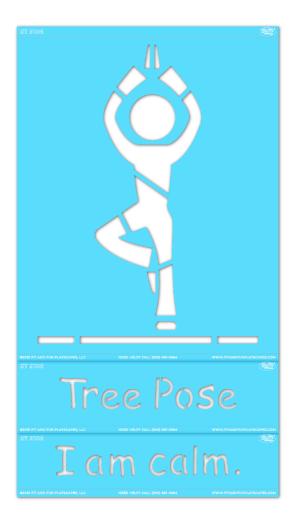

BEFORE YOU START PAINTING: Please completely read the General Instructions & prepare your surfaces as recommended.



STEP 1:

Layout your **STENCIL** in your desired location.

Separate the words along the perforation if you'd like. (For example, you can put the words above, or to the left/right of the illustration.)



STEP 2:

Paint your **STENCIL**. Repeat 1-2 more times to achieve desired vividness, drying after each application. Then remove your **STENCIL**. Fill in the gaps so your **STENCIL** is complete.

Allow the paint to dry for a minimum of 24 hours before use.

CONGRATULATIONS!!! YOU FINISHED PAINTING TREE POSE YOU DID IT! GIVE YOURSELVES A PAT ON THE BACK!

Your finished Tree Pose should look like the image below.



Have any questions? We're here to help – call us at (800) 681-0684! VISIT OUR WEBSITE AT **WWW.FITANDFUNPLAYSCAPES.COM**






ST 5111 COBRA POSE APPLICATION INSTRUCTIONS

SIZE

approx. 4 feet 5 inches wide x 4 feet 4 inches long

PAINTERS & TIME 1-2 painters for less than 1 hr

INCLUDED IN THE BOX: 1 Stencil Sheet (3 pieces)

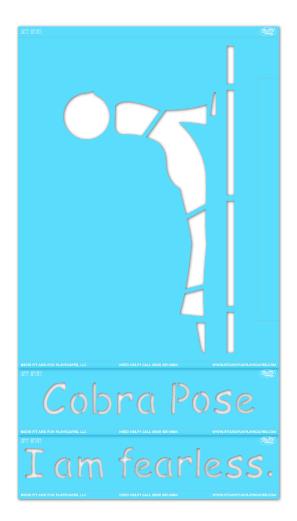

BEFORE YOU START PAINTING: Please completely read the General Instructions & prepare your surfaces as recommended.



STEP 1:

Separate the stencil pieces along the perforation. Rotate the illustration stencil piece clockwise.

Layout your **STENCIL** in your desired location.

**You can put the words above, or to the left/right of the illustration.



STEP 2:

Paint your **STENCIL**. Repeat 1-2 more times to achieve desired vividness, drying after each application. Then remove your **STENCIL**. Fill in the gaps so your **STENCIL** is complete.

Allow the paint to dry for a minimum of 24 hours before use.

CONGRATULATIONS!!! YOU FINISHED PAINTING COBRA POSE YOU DID IT! GIVE YOURSELVES A PAT ON THE BACK!

Your finished Cobra Pose should look like the image below.



Have any questions? We're here to help – call us at (800) 681-0684! VISIT OUR WEBSITE AT **WWW.FITANDFUNPLAYSCAPES.COM**






ST 5113 MOON POSE APPLICATION INSTRUCTIONS

SIZE

approx. 3 feet 2 inches wide x 6 feet 3 inches long

PAINTERS & TIME 1-2 painters for less than 1 hr

INCLUDED IN THE BOX: 1 Stencil Sheet (3 pieces)

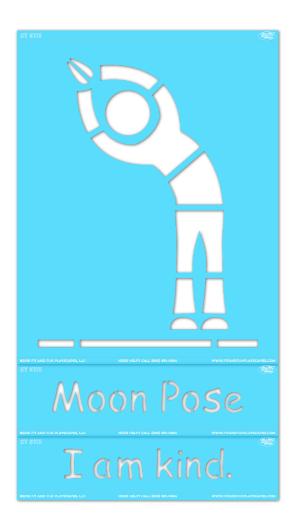

BEFORE YOU START PAINTING: Please completely read the General Instructions & prepare your surfaces as recommended.



STEP 1:

Layout your **STENCIL** in your desired location.

Separate the words along the perforation if you'd like. (For example, you can put the words above, or to the left/right of the illustration.)



STEP 2:

Paint your **STENCIL**. Repeat 1-2 more times to achieve desired vividness, drying after each application. Then remove your **STENCIL**. Fill in the gaps so your **STENCIL** is complete.

Allow the paint to dry for a minimum of 24 hours before use.

CONGRATULATIONS!!! YOU FINISHED PAINTING MOON POSE YOU DID IT! GIVE YOURSELVES A PAT ON THE BACK!

Your finished Moon Pose should look like the image below.



Have any questions? We're here to help – call us at (800) 681-0684! VISIT OUR WEBSITE AT **WWW.FITANDFUNPLAYSCAPES.COM**





ST 5092 SKIPADEE THE DRAGONFLY HOPSCOTCH


APPLICATION INSTRUCTIONS

SIZE


approx. 9 feet wide x 11 feet long

PAINTERS & TIME 1-2 painters for 2-3 hrs

INCLUDED IN THE BOX: 2 Stencil Sheets (8 pieces & multiple inserts)

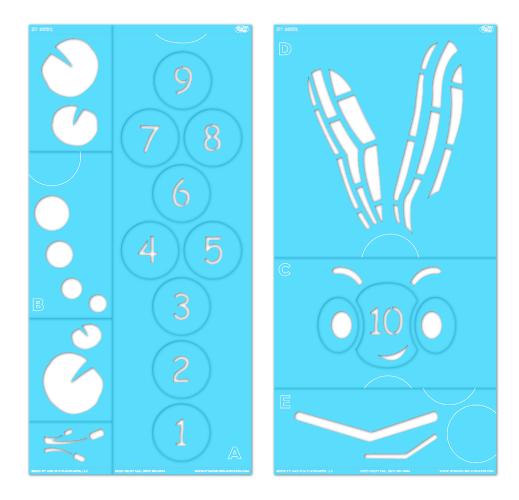


BEFORE YOU START PAINTING: Please completely read the General Instructions & prepare your surfaces as recommended.

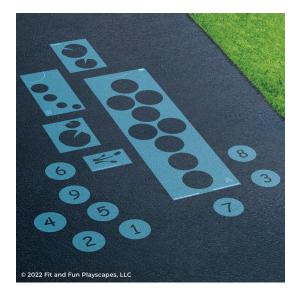

STEP 1:

Separate the stencil pieces along the perforation on the first stencil sheet (the stencil sheet with the body stencil piece).

Pop out the numbered inserts on the body stencil piece and put aside.

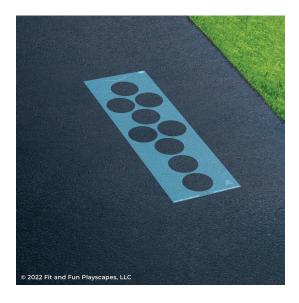

STEP 2:

Place **STENCIL A** in your desired location.



STEP 3:

Paint **STENCIL A**. Repeat 1-2 more times to achieve desired vividness, drying after each application. Then remove **STENCIL A**.



STEP 4:

Align **STENCIL B** with the painted pavement. Paint **STENCIL B**. Repeat 1-2 more times to achieve desired vividness, drying after each application. Then remove **STENCIL B**.



STEP 5:

Take the second stencil sheet labeled D, C and E and separate the stencil pieces along the perforation.

Pop out the eyes and the numbered insert on the head stencil piece and put aside.



STEP 6:

Align **STENCIL C** with the painted pavement. Paint **STENCIL C**. Repeat 1-2 more times to achieve desired vividness, drying after each application. Then remove **STENCIL C**.



STEP 7:

Rotate and align **STENCIL D** with the painted pavement, as shown. Paint **STENCIL D**. Repeat 1-2 more times to achieve desired vividness, drying after each application. Then remove **STENCIL D**.



STEP 8:

After the pavement and **STENCIL D** are fully dry, flip and align **STENCIL D** with the painted pavement, as shown. Paint **STENCIL D**. Repeat 1-2 more times to achieve desired vividness, drying after each application. Then remove **STENCIL D**.



STEP 9:

Rotate and align **STENCIL E** with the painted pavement, as shown. Paint **STENCIL E**. Repeat 1-2 more times to achieve desired vividness, drying after each application. Then remove **STENCIL E**.




STEP 10:

After the pavement and **STENCIL E** are fully dry, flip and align **STENCIL E** with the painted pavement, as shown. Paint **STENCIL E**. Repeat 1-2 more times to achieve desired vividness, drying after each application. Then remove **STENCIL E**.



STEP 11:

Place face and numbered inserts over the painted areas. Paint each piece. Repeat 1-2 more times to achieve desired vividness, drying after each application. Remove all stencil inserts.

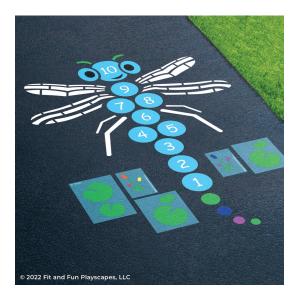

STEP 12:

Place the lily pads and cattail pieces where you would like. Paint each piece. Repeat 1-2 more times to achieve desired vividness, drying after each application. Remove all stencil pieces.

Allow the paint to dry for a minimum of 24 hours before use.

CONGRATULATIONS!!!

YOU FINISHED PAINTING SKIPADEE THE DRAGONFLY HOPSCOTCH YOU DID IT! GIVE YOURSELVES A PAT ON THE BACK!

Your finished Skipadee the Dragonfly Hopscotch should look like the image below.



Have any questions? We're here to help – call us at (800) 681-0684! VISIT OUR WEBSITE AT WWW.FITANDFUNPLAYSCAPES.COM






ST 5100 MARCH ANTS APPLICATION INSTRUCTIONS

SIZE

approx. 2 feet 5 inches wide, length varies

PAINTERS & TIME 1-2 painters for less than 1 hr

INCLUDED IN THE BOX: 1 Stencil Sheet (2 pieces)

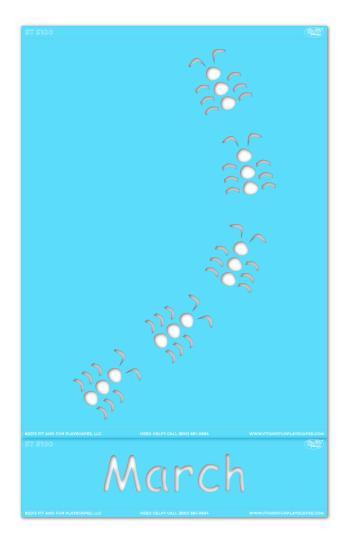


BEFORE YOU START PAINTING: Please completely read the General Instructions & prepare your surfaces as recommended.



STEP 1:

Layout your **STENCIL** in your desired location.

Separate the word along the perforation if you'd like. (For example, you can put the word above, or to the left/right of the illustration.)

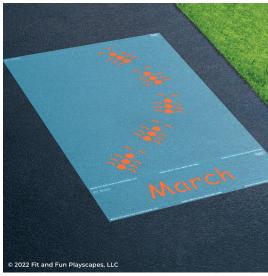

STEP 2:

Paint your **STENCIL**. Repeat 1-2 more times to achieve desired vividness, drying after each application. Then remove your **STENCIL**. Fill in the gaps so your **STENCIL** is complete.

Allow the paint to dry for a minimum of 24 hours before use.



TO MAKE LONGER:

First, ensure that your **STENCIL** and pavement are completely dry. Separate the word along the perforation. Flip and align your **STENCIL** with the painted pavement and paint. Repeat 1-2 more times to achieve desired vividness, drying after each application. Then remove your **STENCIL**. Fill in the gaps so your **STENCIL** is complete. Continue as long as you'd like. **Allow the paint to dry for a minimum of 24 hours before use.**

CONGRATULATIONS!!!

YOU FINISHED PAINTING MARCH ANTS YOU DID IT! GIVE YOURSELVES A PAT ON THE BACK!

Your finished March Ants should look like the image below.



Have any questions? We're here to help – call us at (800) 681-0684! VISIT OUR WEBSITE AT **WWW.FITANDFUNPLAYSCAPES.COM**






ST 5101 CRAB CRAWL APPLICATION INSTRUCTIONS

SIZE

approx. 3 feet wide x 7 feet 3 inches long

PAINTERS & TIME 1-2 painters for less than 1 hr

INCLUDED IN THE BOX: 1 Stencil Sheet (2 pieces)

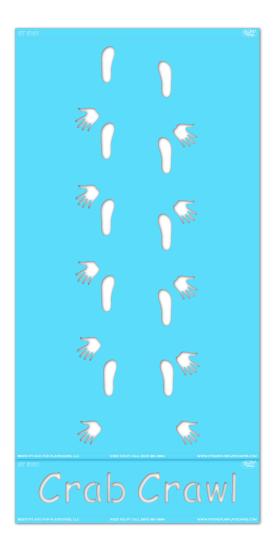

BEFORE YOU START PAINTING: Please completely read the General Instructions & prepare your surfaces as recommended.



STEP 1:

Layout your **STENCIL** in your desired location.

Separate the word along the perforation if you'd like. (For example, you can put the word above, or to the left/right of the illustration.)



STEP 2:

Paint your **STENCIL**. Repeat 1-2 more times to achieve desired vividness, drying after each application. Then remove your **STENCIL**. Fill in the gaps so your **STENCIL** is complete.

Allow the paint to dry for a minimum of 24 hours before use.

CONGRATULATIONS!!! YOU FINISHED PAINTING CRAB CRAWL YOU DID IT! GIVE YOURSELVES A PAT ON THE BACK!

Your finished Crab Crawl should look like the image below.



Have any questions? We're here to help – call us at (800) 681-0684! VISIT OUR WEBSITE AT **WWW.FITANDFUNPLAYSCAPES.COM**






ST 5102 TIPTOE SNAKE APPLICATION INSTRUCTIONS

SIZE

approx. 5 feet wide x 10 feet long

PAINTERS & TIME 2 painters for 1-2 hrs

INCLUDED IN THE BOX: 1 Stencil Sheet (4 pieces & multiple inserts)

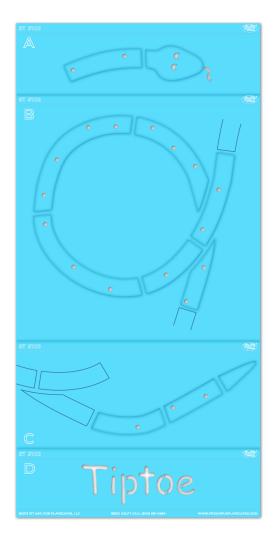

BEFORE YOU START PAINTING: Please completely read the General Instructions & prepare your surfaces as recommended.



STEP 1:

Separate **STENCILS A-D** along the perforation.

Remove the head and body inserts from **STENCIL A**, body inserts from **STENCIL B** and tail inserts from **STENCIL C**. Then put stencil pieces and inserts aside.




STEP 2:

Place **STENCIL A** in your desired location. Paint **STENCIL A**. Repeat 1-2 more times to achieve desired vividness, drying after each application. Then remove **STENCIL A**. Fill in the gaps so your **STENCIL** is complete.



STEP 3:

Align **STENCIL B** to the painted pavement, using the etch mark. Paint **STENCIL B**. Repeat 1-2 more times to achieve desired vividness, drying after each application. Then remove **STENCIL B**. Fill in the gaps so your **STENCIL** is complete.

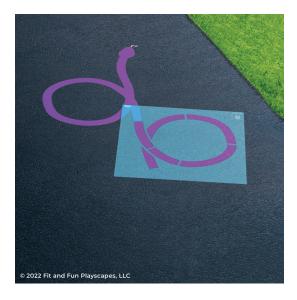

STEP 4:

After the pavement and **STENCIL B** are fully dry, flip **STENCIL B** and align using the etch mark. Paint **STENCIL B**. Repeat 1-2 more times to achieve desired vividness, drying after each application. Then remove **STENCIL B**. Fill in the gaps so your **STENCIL** is complete.



STEP 5:

Align **STENCIL C** to the painted pavement, using the etch marks. Paint **STENCIL C**. Repeat 1-2 more times to achieve desired vividness, drying after each application. Then remove **STENCIL C**. Fill in the gaps so your **STENCIL** is complete.



YOU SUCCEEDED!

You finished painting the first layer of Tiptoe Snake. Your painted Tiptoe Snake should look like the image to the left.



TO PAINT THE SECOND LAYER:

Place the eyes and dot pieces over the painted areas. Paint each piece. Repeat 1-2 more times to achieve desired vividness, drying after each application. Remove all stencil inserts.



PAINT TIPTOE:

Lastly, paint the word "Tiptoe" anywhere you would like. (For example, you can put the word above, or to the left/right of the illustration.) Repeat 1-2 more times to achieve desired vividness, drying after each application. Then remove your **STENCIL**. Fill in the gaps so your **STENCIL** is complete.

Allow the paint to dry for a minimum of 24 hours before use.

CONGRATULATIONS!!! YOU FINISHED PAINTING TIPTOE SNAKE YOU DID IT! GIVE YOURSELVES A PAT ON THE BACK!

Your finished Tiptoe Snake should look like the image below.



Have any questions? We're here to help – call us at (800) 681-0684! VISIT OUR WEBSITE AT WWW.FITANDFUNPLAYSCAPES.COM






ST 5103 JUMP LOGS APPLICATION INSTRUCTIONS

SIZE

approx. 2 feet 6 inches wide, length varies

PAINTERS & TIME 1-2 painters for less than 1 hr

INCLUDED IN THE BOX: 1 Stencil Sheet (2 pieces & 2 inserts)

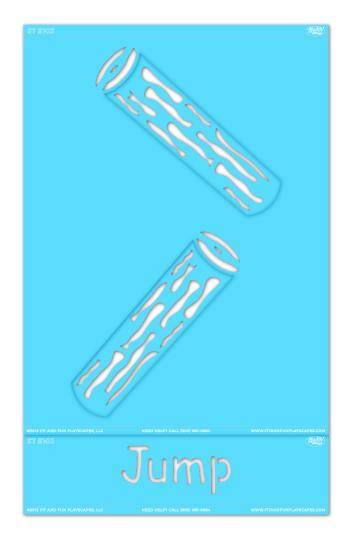

BEFORE YOU START PAINTING: Please completely read the General Instructions & prepare your surfaces as recommended.



STEP 1:

Remove the log detail inserts from **STENCIL A** then put aside

Separate the word along the perforation if you'd like. (For example, you can put the word above, or to the left/right of the illustration.)



STEP 2: Place **STENCIL A** in your desired location.



STEP 3:

Paint **STENCIL A**. Repeat 1-2 more times to achieve desired vividness, drying after each application. Then remove **STENCIL A**.



STEP 4:

Place the log detail inserts on top of the painted logs.



STEP 5:

Paint the log details. Repeat 1-2 more times to achieve desired vividness, drying after each application. Then remove the log detail inserts. Fill in the gaps so your **STENCIL** is complete.

Allow the paint to dry for a minimum of 24 hours before use.



TO MAKE LONGER:

First, ensure that your **STENCIL** and pavement are completely dry. Separate the word along the perforation. Align your **STENCIL** with the painted pavement and paint. Repeat 1-2 more times to achieve desired vividness, drying after each application. Then remove your **STENCIL**. Fill in the gaps so your **STENCIL** is complete. Continue as long as you'd like. **Allow the paint to dry for a minimum of 24** hours before use.

CONGRATULATIONS!!!

YOU FINISHED PAINTING JUMP LOGS YOU DID IT! GIVE YOURSELVES A PAT ON THE BACK!

Your finished Jump Logs should look like the image below.



Have any questions? We're here to help – call us at (800) 681-0684! VISIT OUR WEBSITE AT **WWW.FITANDFUNPLAYSCAPES.COM**





ST 5104 STEP STONES


APPLICATION INSTRUCTIONS

SIZE

approx. 3 feet wide, length varies

PAINTERS & TIME 1-2 painters for less than 1 hr

INCLUDED IN THE BOX: 1 Stencil Sheet (2 pieces)

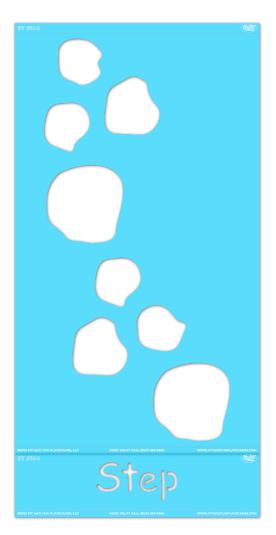

BEFORE YOU START PAINTING: Please completely read the General Instructions & prepare your surfaces as recommended.



STEP 1:

Layout your **STENCIL** in your desired location.

Separate the word along the perforation if you'd like. (For example, you can put the word above, or to the left/right of the illustration.)



2 222 Fit and Fun Playscapes, LLC

STEP 2:

Paint your **STENCIL**. Repeat 1-2 more times to achieve desired vividness, drying after each application. Then remove your **STENCIL**. Fill in the gaps so your **STENCIL** is complete.

Allow the paint to dry for a minimum of 24 hours before use.

TO MAKE LONGER:


First, ensure that your **STENCIL** and pavement are completely dry. Separate the word along the perforation. Align your **STENCIL** with the painted pavement and paint. Repeat 1-2 more times to achieve desired vividness, drying after each application. Then remove your **STENCIL**. Fill in the gaps so your **STENCIL** is complete. Continue as long as you'd like. **Allow the paint to dry for a minimum of 24 hours before use.**

CONGRATULATIONS!!! YOU FINISHED PAINTING STEP STONES YOU DID IT! GIVE YOURSELVES A PAT ON THE BACK!

Your finished Step Stones should look like the image below.



Have any questions? We're here to help – call us at (800) 681-0684! VISIT OUR WEBSITE AT **WWW.FITANDFUNPLAYSCAPES.COM**

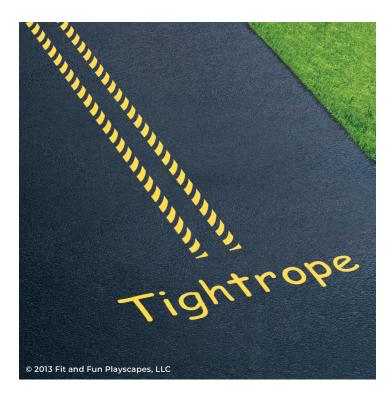



ST 5105 BALANCE TIGHTROPE APPLICATION INSTRUCTIONS


SIZE

approx. 2 feet 8 inches wide, length varies

PAINTERS & TIME

1-2 painters for less than 1 hr

INCLUDED IN THE BOX: 1 Stencil Sheet (2 pieces)

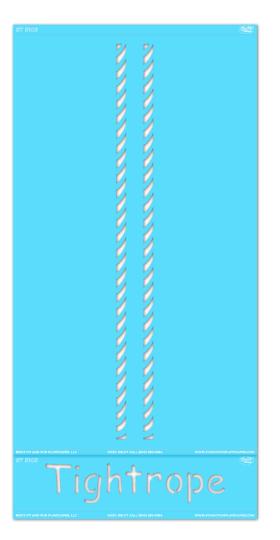

BEFORE YOU START PAINTING: Please completely read the General Instructions & prepare your surfaces as recommended.



STEP 1:

Layout your **STENCIL** in your desired location.

Separate the word along the perforation if you'd like. (For example, you can put the word above, or to the left/right of the illustration.)





STEP 2:

Paint your **STENCIL**. Repeat 1-2 more times to achieve desired vividness, drying after each application. Then remove your **STENCIL**. Fill in the gaps so your **STENCIL** is complete.


Allow the paint to dry for a minimum of 24 hours before use.

TO MAKE LONGER:

First, ensure that your **STENCIL** and pavement are completely dry. Separate the word along the perforation. Align your **STENCIL** with the painted pavement and paint. Repeat 1-2 more times to achieve desired vividness, drying after each application. Then remove your **STENCIL**. Fill in the gaps so your **STENCIL** is complete. Continue as long as you'd like. **Allow the paint to dry for a minimum of 24 hours before use.**

CONGRATULATIONS!!! YOU FINISHED PAINTING BALANCE TIGHTROPE YOU DID IT! GIVE YOURSELVES A PAT ON THE BACK!


Your finished Balance Tightrope should look like the image below.

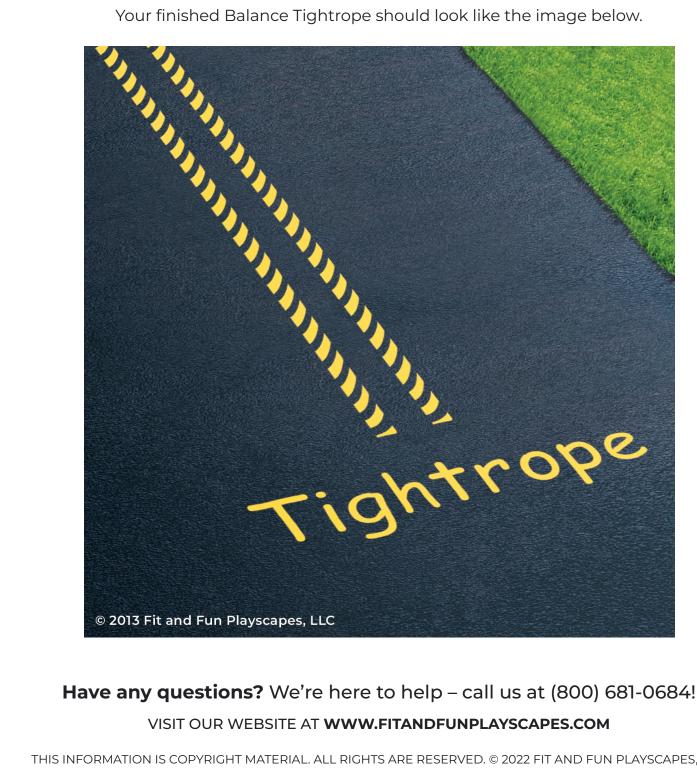

Have any questions? We're here to help - call us at (800) 681-0684!

CONGRATULATIONS!!! YOU FINISHED PAINTING THE NATURE ACTIVITY CIRCUITTM DELUXE PACKAGE YOU DID IT! GIVE YOURSELVES A PAT ON THE BACK!

Your finished Nature Activity Circuit[™] Deluxe Package should look like the image below.

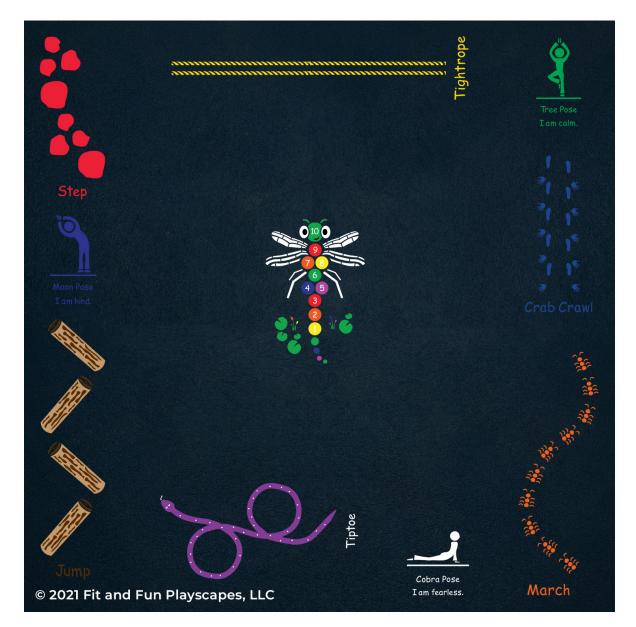

Have any questions? We're here to help - call us at (800) 681-0684!

VISIT OUR WEBSITE AT **WWW.FITANDFUNPLAYSCAPES.COM**