



# ST 5024 BUTTERFLY HOPSCOTCH

**APPLICATION INSTRUCTIONS** 

#### **SIZE**


approx. 3 feet 6 inches wide x 12 feet 5 inches long

#### **PAINTERS & TIME**

1-2 painters for 1-2 hrs

#### **INCLUDED IN THE BOX: 2 Stencil Sheets (multiple inserts)**



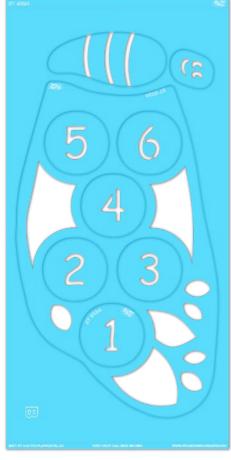

## BEFORE YOU START PAINTING: Please completely read the General Instructions & prepare your surfaces as recommended.



#### STEP 1:


Pop out the left wing and numbered inserts from **STENCIL A** then put aside.



#### STEP 2:

Place **STENCIL A** in your desired location.

Paint **STENCIL A**. Repeat 1-2 more times to achieve desired vividness, drying after each application. Then remove **STENCIL A**.

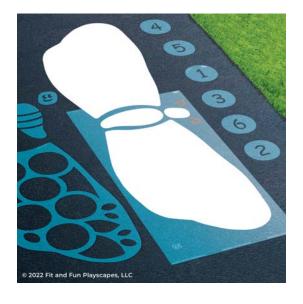

#### **STEP 3:**

Pop out the right wing and numbered inserts from **STENCIL B** then put aside.

Align **STENCIL B** to the painted pavement. Paint **STENCIL B**. Repeat 1-2 more times to achieve desired vividness, drying after each application. Then remove **STENCIL B**.



#### YOU SUCCEEDED!

You finished painting the first layer of Butterfly Hopscotch. Your painted hopscotch should look like the image to the left.



#### **STEP 5:**

Place the left wing insert from **STENCIL A** over the painted area. Paint the details and circles. Repeat 1-2 more times to achieve desired vividness, drying after each application. Then remove the left wing insert.



#### STEP 6:

Place the right wing insert from **STENCIL B** over the painted area. Paint the details and circles. Repeat 1-2 more times to achieve desired vividness, drying after each application. Then remove the right wing insert.




## YOU SUCCEEDED! YOU'RE ALMOST DONE!

You finished painting the second layer of Butterfly Hopscotch. Your painted hopscotch should look like the image to the left.



#### **STEP 8:**

Place the numbered circle inserts over the painted areas. Paint each number. Repeat 1-2 more times to achieve desired vividness, drying after each application. Remove all stencil inserts. Fill in the gaps so your **STENCIL** is complete.

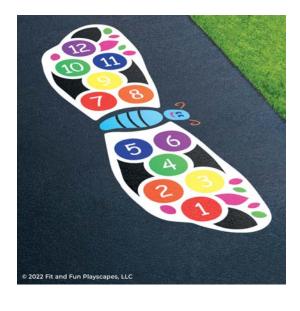

#### STEP 9:

Place the body and head inserts over the painted areas. Paint each insert. Repeat 1-2 more times to achieve desired vividness, drying after each application. Remove all stencil inserts.

Allow the paint to dry for a minimum of 24 hours before use.

## **CONGRATULATIONS!!!**

### YOU FINISHED PAINTING BUTTERFLY HOPSCOTCH YOU DID IT! GIVE YOURSELVES A PAT ON THE BACK!

Your finished Butterfly Hopscotch should look like the image below.



Have any questions? We're here to help – call us at (800) 681-0684!

VISIT OUR WEBSITE AT WWW.FITANDFUNPLAYSCAPES.COM

THIS INFORMATION IS COPYRIGHT MATERIAL. ALL RIGHTS ARE RESERVED. © 2022 FIT AND FUN PLAYSCAPES, LLC.