



ST 5095 FRACTION ACTIONZ

APPLICATION INSTRUCTIONS

SIZE

approx. 14 feet 5 inches wide x 14 feet long


PAINTERS & TIME


2-4 painters for 3-6 hrs


INCLUDED IN THE BOX: 5 Stencil Sheets (multiple pop outs & inserts)





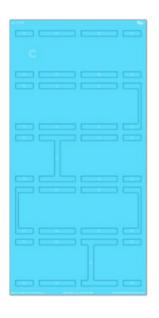

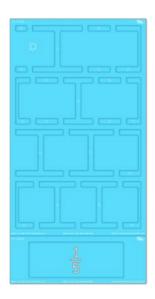

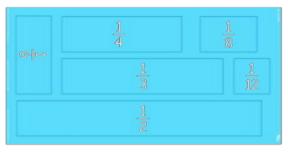

BEFORE YOU START PAINTING: Please completely read the General Instructions & prepare your surfaces as recommended.



STEP 1:

Pop out the border pieces from **STENCIL A** and discard them (refer to discard symbol on stencil).





STEP 2:

Place **STENCIL A** in your desired location. Paint **STENCIL A**. Repeat 1-2 more times to achieve desired vividness, drying after each application. Then remove **STENCIL A**. Fill in the gaps so your **STENCIL** is complete.




STEP 3:

Pop out the border pieces from **STENCIL B** and separate the fraction section along the perforation (pop out the fraction pieces and save to use later). Discard the border pieces (refer to discard symbol on stencil). Align **STENCIL B** to the edge of the dry painted pavement. Paint **STENCIL B**. Repeat 1-2 more times to achieve desired vividness, drying after each application. Then remove **STENCIL B**. Fill in the gaps so your **STENCIL** is complete.



STEP 4:

Pop out the border pieces from **STENCIL C**. Discard the border pieces (refer to discard symbol on stencil). Align the border from **STENCIL C** to the edge of the dry painted pavement. Paint **STENCIL C**. Repeat 1-2 more times to achieve desired vividness, drying after each application. Then remove **STENCIL C**. Fill in the gaps so your **STENCIL** is complete.

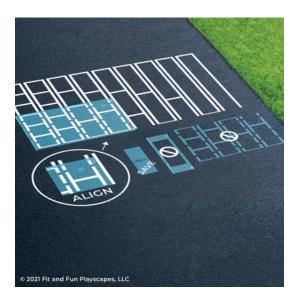

STEP 5:

Pop out the border pieces from **STENCIL D** and separate the fraction section along the perforation (pop out the fraction piece and save to use later). Discard the border pieces (refer to discard symbol on stencil). Align the borders from **STENCIL D** to the edges of the dry painted pavement. Paint **STENCIL D**. Repeat 1-2 more times to achieve desired vividness, drying after each application. Then remove **STENCIL D**. Fill in the gaps so your **STENCIL** is complete.




YOU SUCCEEDED!

You finished painting the first half of the Fraction Actionz border. Your painted Fraction Actionz should look like the image to the left.




STEP 7:

Make sure the painted pavement is completely dry before you continue on. Flip and align the border from **STENCIL C** to the edge of the dry painted pavement. Paint **STENCIL C**. Repeat 1-2 more times to achieve desired vividness, drying after each application. Then remove **STENCIL C**. Fill in the gaps so your **STENCIL** is complete.

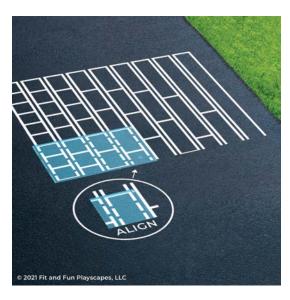


STEP 8:

Flip and align the border from **STENCIL D** to the edge of the dry painted pavement. Paint **STENCIL D**. Repeat 1-2 more times to achieve desired vividness, drying after each application. Then remove **STENCIL D**. Fill in the gaps so your **STENCIL** is complete.

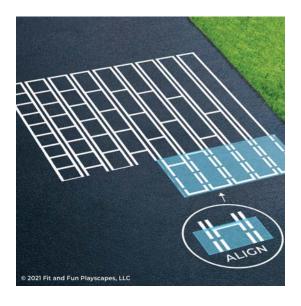

STEP 9:

Flip and align the border from **STENCIL A** to the edge of the dry painted pavement. Paint **STENCIL A**. Repeat 1-2 more times to achieve desired vividness, drying after each application. Then remove **STENCIL A**. Fill in the gaps so your **STENCIL** is complete.

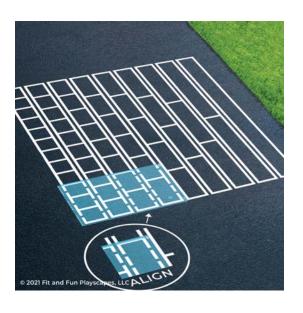

STEP 10:

Flip and align the border from **STENCIL B** to the edge of the dry painted pavement. Paint **STENCIL B**. Repeat 1-2 more times to achieve desired vividness, drying after each application. Then remove **STENCIL B**. Fill in the gaps so your **STENCIL** is complete.



YOU SUCCEEDED!

You finished painting the border of Fraction Actionz. Your painted Fraction Actionz should look like the image to the left.



STEP 12: PAINT INSIDE

Now paint the inside shapes of Fraction Actionz. Your painted Fraction Actionz should look like the image to the left. Repeat 1-2 more times to achieve desired vividness, drying after each application. Before proceeding to the next step, make sure the paint on the pavement is completely dry.



TO PAINT THE SECOND LAYER:

First pop out the fraction pieces from the last stencil sheet and collect all the fraction pieces from the other stencil sheets. Place the fraction inserts over the dry painted areas. Paint each fraction. Repeat 1-2 more times to achieve desired vividness, drying after each application. Remove all stencil inserts.



STEP 14:

Repeat each fraction until you finish each row. See the image to the left for reference.

Make sure each fraction insert is completely dry before using again.

Allow the paint to dry for a minimum of 24 hours before use.

CONGRATULATIONS!!!

YOU FINISHED FRACTION ACTIONZ YOU DID IT! GIVE YOURSELVES A PAT ON THE BACK!

Your finished Fraction Actionz should look like the image below.



Have any questions? We're here to help – call us at (800) 681-0684!

VISIT OUR WEBSITE AT WWW.FITANDFUNPLAYSCAPES.COM

THIS INFORMATION IS COPYRIGHT MATERIAL. ALL RIGHTS ARE RESERVED. © 2022 FIT AND FUN PLAYSCAPES, LLC.